

DataWedge Configurations


There are two ways to configure DataWedge settings.

1. Configuring settings from A+W Smart Companion App


The A+W Smart Companion automatically takes over this configuration after installation and the first start. If there are any problems, please refer to 2. „Manually configure DataWedge” to find out how to perform the configuration manually.

1.1. Open A+W Smart Companion app and go to Settings


1.2. Navigate to **Help**

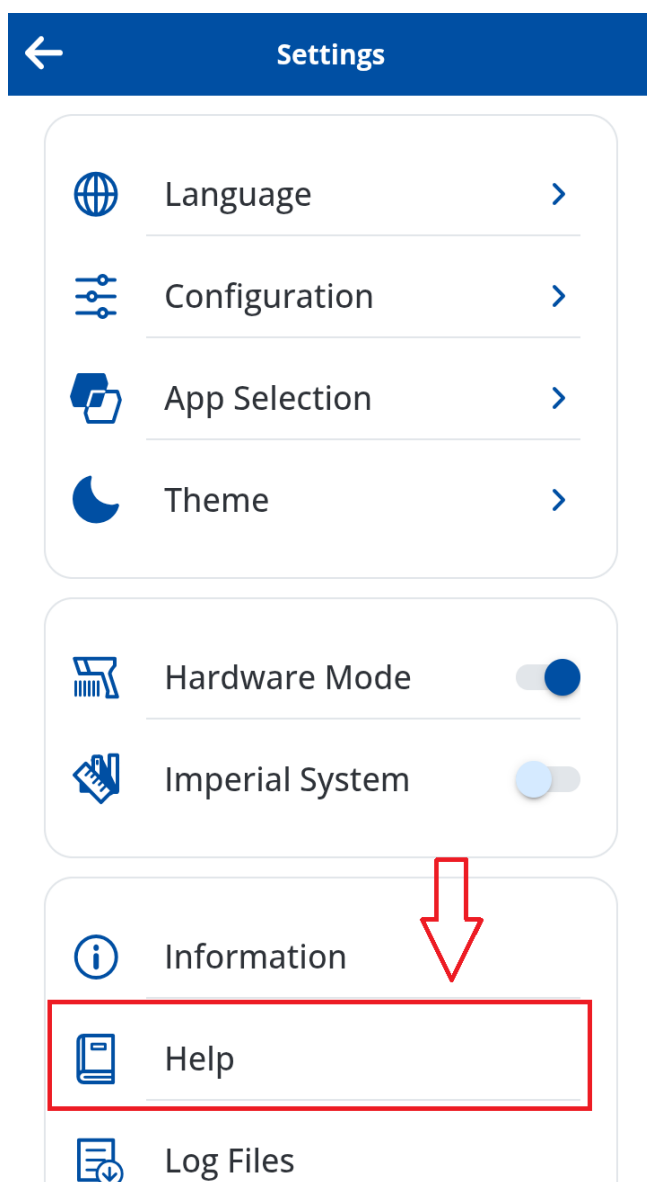

1.3. Click on **Reset DataWedge Profile**

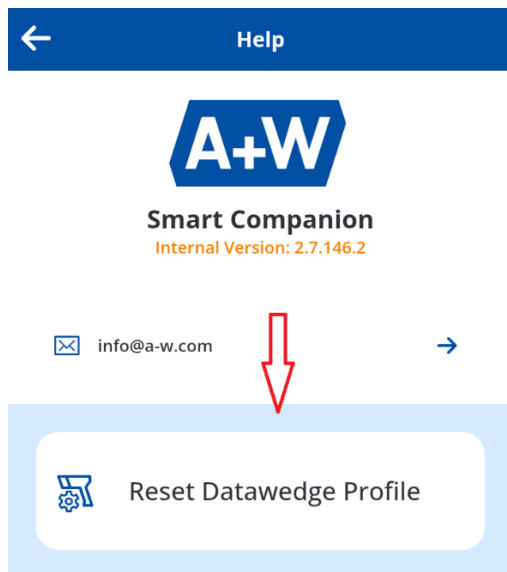


1.4. By clicking **Reset DataWedge Profile**, a popup opens, click on the **Confirm** button.

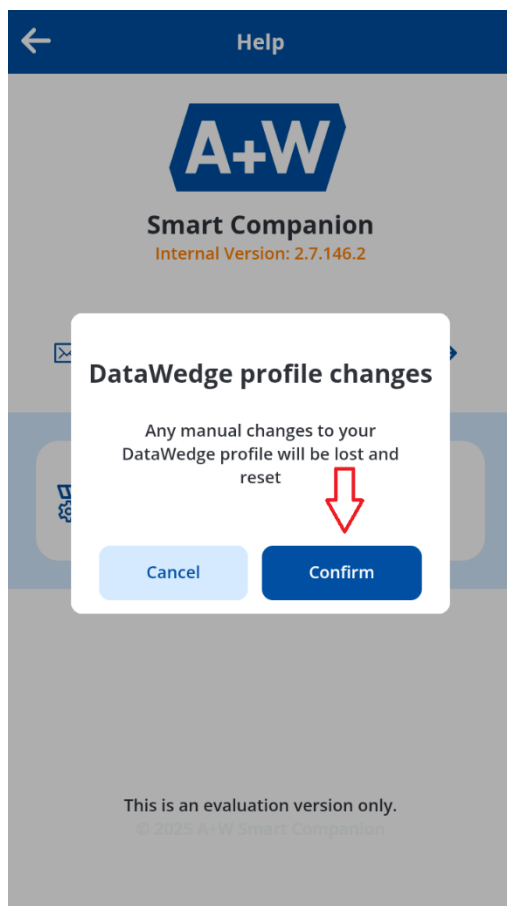


1.5. After clicking Confirm Button, Success message displayed.

It will create another profile named SMC in DataWedge and A+W Smart Companion is then pointing to that profile. Any further manual configurations need to be further entertained in the SMC profile.

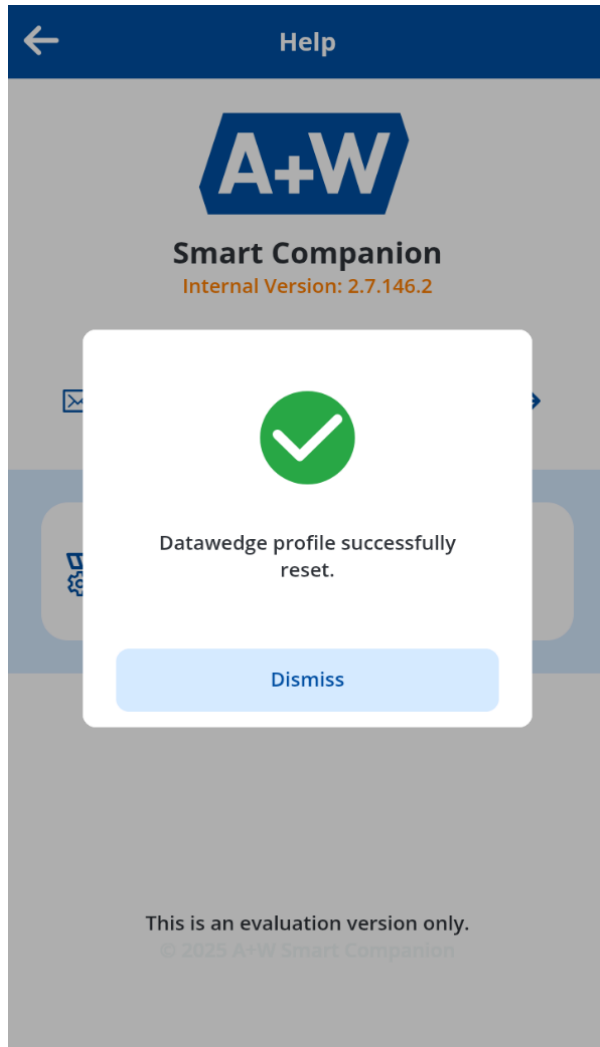


2. Configuring settings in DataWedge manually


Go to **Profile0**

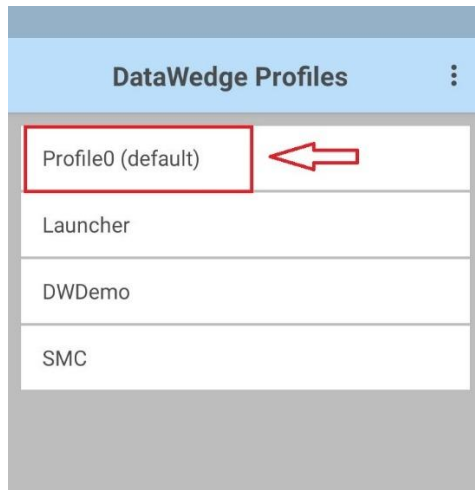

2.1. Disable the Keystroke Output

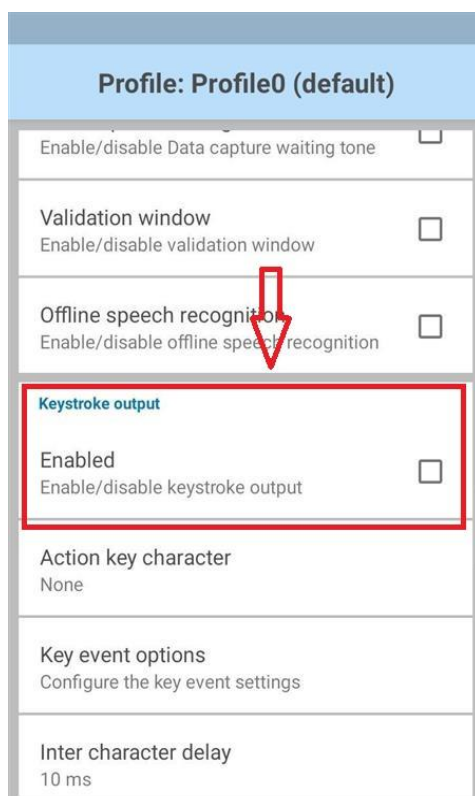

2.2. Enable the Intent Output

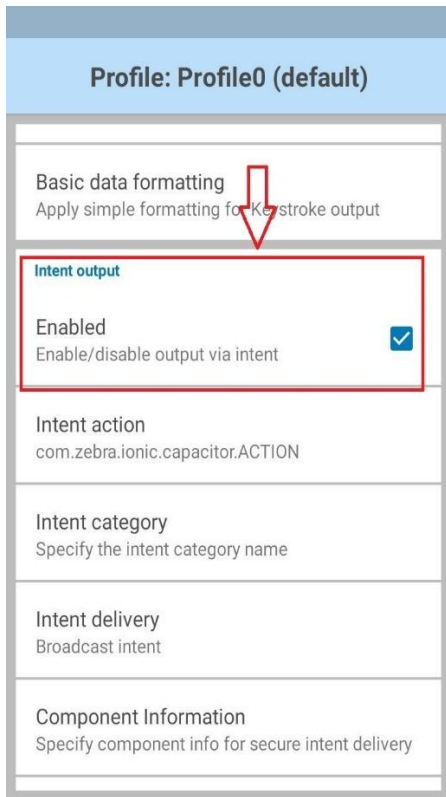

Profile: Profile0 (default)

Basic data formatting
Apply simple formatting for Keystroke output

Intent output

Enabled ☒
Enable/disable output via intent

Intent action
com.zebra.ionic.capacitor.ACTION


Intent category
Specify the intent category name

Intent delivery
Broadcast intent

Component Information
Specify component info for secure intent delivery

2.3. Intent Output > Intent Action

Under Intent output select Intent action and paste: **com.zebra.ionic.capacitor.ACTION**

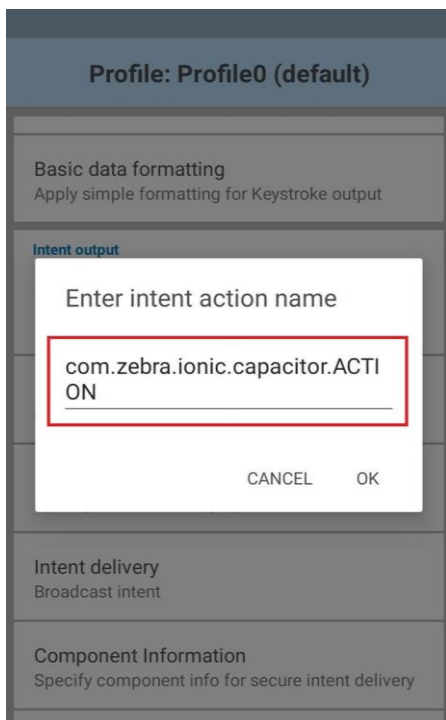

Profile: Profile0 (default)

Basic data formatting
Apply simple formatting for Keystroke output

Intent output

Enter intent action name

com.zebra.ionic.capacitor.ACTION

CANCEL OK

Intent delivery
Broadcast intent

Component Information
Specify component info for secure intent delivery

2.4. Intent Output > Intent delivery > choose **Broadcast intent**

